

ACCESSORIES

Standard:○ Option:▲


Item	Name		Remarks
Installation	Flexible engine mount	○	
	Propeller shaft half coupling (Slit type)	▲	φ 20
	Propeller shaft half coupling (Taper type)	▲	φ 28 or 30
	Propeller shaft half coupling (Straight rough bore)	▲	φ 16
Fuel	Fuel tank with pipe (30lit./2m)	▲	
Cooling	Exhaust water mixing elbow, L-type	○	
	Exhaust water mixing elbow, U-type	▲	
	Kingston cock	▲	
Lubrication	Lube oil evacuation pump	▲	
Starting and stopping	Engine stop cable (Manual)	▲	3m
Electrical and Instrumentation	Alternator, 12V	▲	35A
	Electric type bilge pump, 12V	▲	
	A-type instrument panel	▲	
	B-type instrument panel	▲	
	New B-type instrument panel	▲	
	Extension wire harness	▲	3m
	Battery switch	▲	
	Two-pole wire harness for engine	▲	
Control	Two-pole alarm switch ass'y for A & B-type	▲	
	Push-pull type remote control cable, 2pcs/unit. (MORSE: 33C)	▲	4m
	Side-mount type single control head. (MORSE: MV)	▲	
Others	Top-mount type single control head. (MORSE: MT3)	▲	
	Spare parts kit	▲	
	Special overhauling tools (for engine)	▲	
	Special overhauling tools (for marine gear)	▲	

INSTRUMENT PANEL

Available: ● Not available: —

Unit:mm(in.)

		A-type	B-type
1.	Key switch	●	●
2.	Push button switch for starting	●	●
3.	Alarm buzzer	C.W. temp., L.O. pressure	●
4.	Alarm lamps	Battery not charging	●
		C.W. high temperature	●
		L.O. low pressure	●
5.	Tachometer	—	●
6.	Tachometer illumination switch	—	●

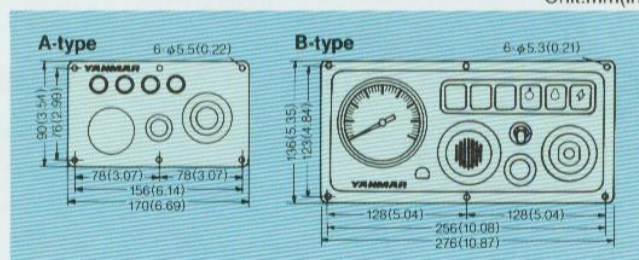

		New B-type
①	Switch unit	Key switch for ON/OFF/START
		Alarm buzzer
		Alarm buzzer stop switch
		Illumination switch for meter
②	Alarm unit	Battery not charging
		Cooling water high temperature
		Lube oil low pressure
③	Tachometer unit	Tachometer with hour meter

