

ACCESSORIES

Standard: ○ Option: ▲

Item	Name	Remarks
Installation	Flexible engine mount	▲ 4 pcs/set
	Propeller shaft half coupling for KMH6A (Straght rough bore)	▲ $\phi 28$
Fuel oil	Fuel oil separator	▲
Cooling	Exhaust water mixing elbow, L-type	○ SUS
	Kingston cock	▲
Lubrication	Lube oil evacuation pump	▲
	Lube oil dipstick for opposite side of engine	▲
Starting & stopping	Engine stop solenoid (Electric)	▲
	Cold starting aid (Air heater type)	▲
Electrical & instrumentation	Alternator, 12V	○ 80A
	Electric type bilge pump, 12V	▲
	B2-type instrument panel	▲
	C-type instrument panel	▲
	D-type instrument panel	▲

Item	Name	Remarks
Electrical & instrumentation	E-type instrument panel	▲
	E2-type instrument panel	▲
	New B-type instrument panel	▲
	New C-type instrument panel	▲
	New D-type instrument panel	▲
	Connecting wire harness for dual instrument panel	▲
	Meter sensor ass'y for B2, C, D, E and E2-type instrument panel	○
	Meter sensor ass'y for New-C and New D-type instrument panel	○
	Meter sensor ass'y for dual instrument panel (New C+C or D-type)	▲
	Extension wire harness	▲ 4 & 6m
Control	Side-mount type single control head (MORSE: MV)	▲
	Top-mount type single control head (MORSE: MT3)	▲
Others	Onboard tool kit	▲

INSTRUMENT PANELS

Available: ● Not available: —

		B2-type	C-type	D-type	E-type
1.	Tachometer	●	●	●	●
2.	Alarm buzzer	C.W. high temperature	●	●	●
		L.O. low pressure	●	●	●
3.	Alarm lamp unit	Battery not charging	●	●	●
		C.W. high temperature	●	●	●
		L.O. low pressure	●	●	●
4.	Tachometer illumination switch and alarm buzzer/lamps check switch	●	●	●	●
5.	Starting key switch	●	●	—	●
6.	Push button switch for eng. stop	—	●	—	●
7.	Key switch for engine start & stop	—	—	●	—
8.	Operating hour meter	—	●	●	●
9.	L.O. pressure meter	—	●	●	●
10.	C.W. temperature meter	—	●	●	●
11.	Fuse	—	●	●	●
12.	Yanmar marine quartz clock	—	—	●	●
13.	Turbocharger boost meter	—	—	●	●

Unit: mm (in.)

 
B2-type




C-type



D-type

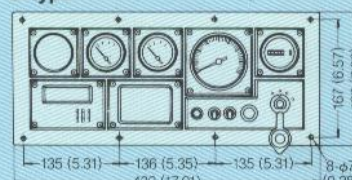


E-type

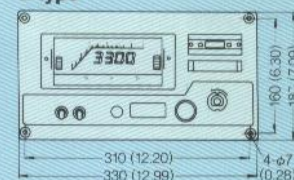 


		New B-type	New C-type	New D-type
①	Switch	Key switch (Starter switch)	●	●
		Engine stop switch	●	●
		Alarm buzzer (C.W. Temp., L.O. pressure)	●	●
		Alarm buzzer stop switch	●	●
		Illumination switch for meter	●	●
②	Alarm lamp unit	Battery not charging	●	●
		C.W. high temperature	●	●
		L.O. low pressure	●	●
③	Tachometer	Tachometer with hour meter	●	●
④	Sub meter unit	L.O. pressure meter	●	●
		C.W. temperature meter	●	●
⑤	Clock unit	Boost meter	—	●
		Quartz clock	—	●

 
New B-type

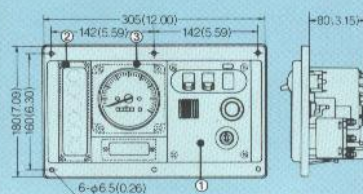

New C-type

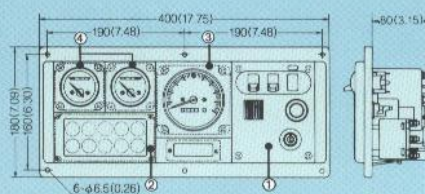 

New D-type

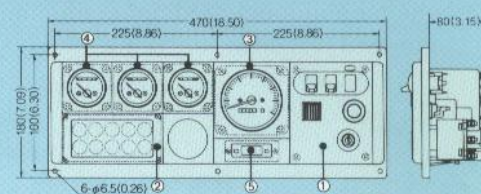 

Unit: mm (in.)